

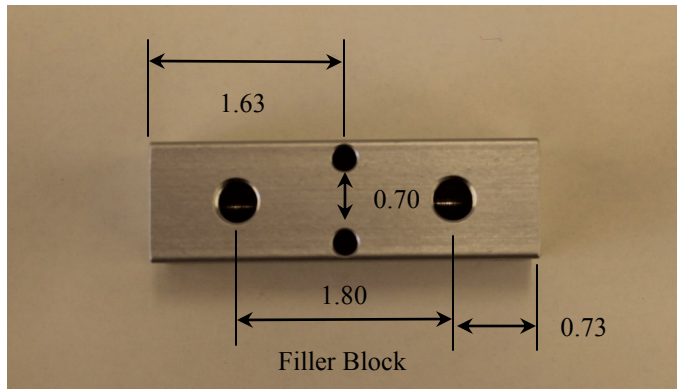


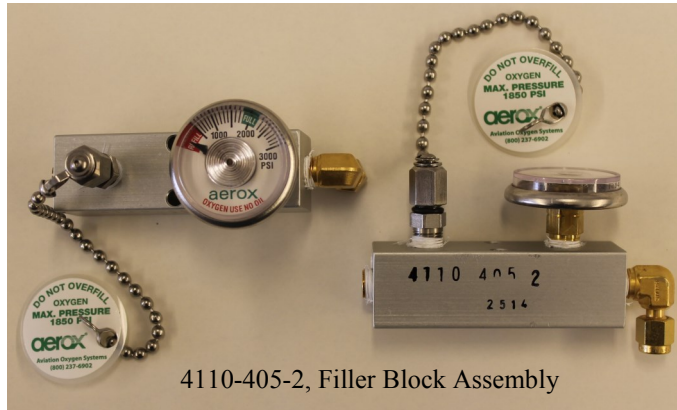

1850 PSI FILLER BLOCK ASSY

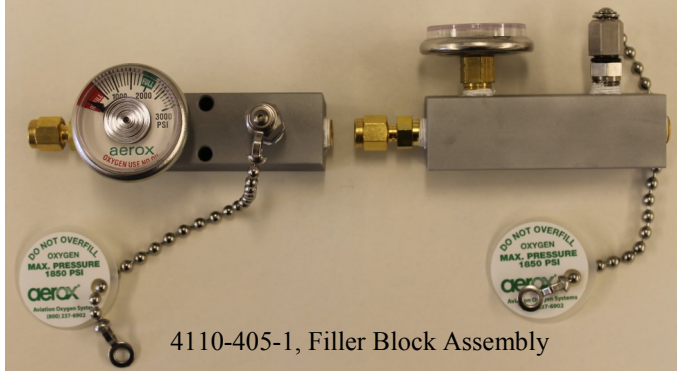

Specifications

Part Number: 4110-405 -1 or -2

Dimensions: (A) Height: See Table

(B) Length: See Table

(C) Weight: See Table

(D) Style: See Table

Description: 1850 PSI Aluminum filler block using Stainless Steel MS Type filler with Schraeder Valve and a 3000 PSI Gauge. Block includes straight or 90 Degree Brass Fitting and plugged end. Includes lanyard secured threaded cap. Unit has two 0.20" through holes for mounting.

Temperature Range: -40 to 225°F

Maintenance: 5 Year Overhaul (Recommended)
Service Life Indefinite.

Part Number	A (Height)	B (Length)	C (Weight)	D (Style)
4110-405-1	2.30"	4.30" (Max)	0.45 Lbs	Straight Fitting
4110-405-2*	2.30"	4.13" (Max)	0.46 Lbs	Elbow Fitting

* Listed Filler Block Assembly is PMA'd for installation in Cirrus SR-20 & SR-22 Aircraft.