

Specifications

Part Number: 4110-465

Dimensions: Height: 1.625 (4.12 cm)

Depth: .822 (2.09)

Hole Pattern: 0.125 X 8 Equal

Weight: .43 oz (12.25 g)

Material: Anodized Aluminum


Thread: 7/16-20 UNF-2A

Release Pressure: 130 PSI Max.

Description: Gold anodized aluminum body retains a replaceable plexi-glass disc. The disc will separate from the body when a relief pressure of 55 PSI or greater is applied.

Maintenance: Service Life Indefinite.

Accessory Part: 4110-479-(X), Overboard Discharge Line; where (X) equals line length

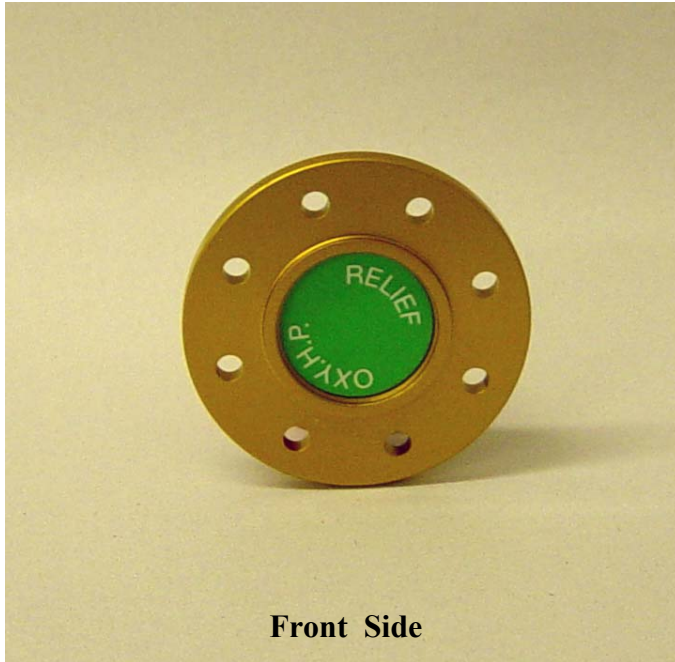

Front Side



Side View