



## OVERBOARD DISCHARGE INDICATOR

### Specifications

**Part Number:** 4110-465

**Dimensions:** Height: 1.625 (4.12 cm)

Depth: .822 (2.09)

Hole Pattern: 0.125 X 8 Equal

Weight: .43 oz (12.25 g)

Material: Anodized Aluminum


Thread: 7/16-20 UNF-2A

Release Pressure: 130 PSI Max.

**Description:** Gold anodized aluminum body retains a replaceable plexi-glass disc. The disc will separate from the body when a relief pressure of 55 PSI or greater is applied.

**Maintenance:** Service Life Indefinite.

**Accessory Part:** 4110-479-( ), Overboard Discharge Line (Includes A1094, AN Reducer Fitting)

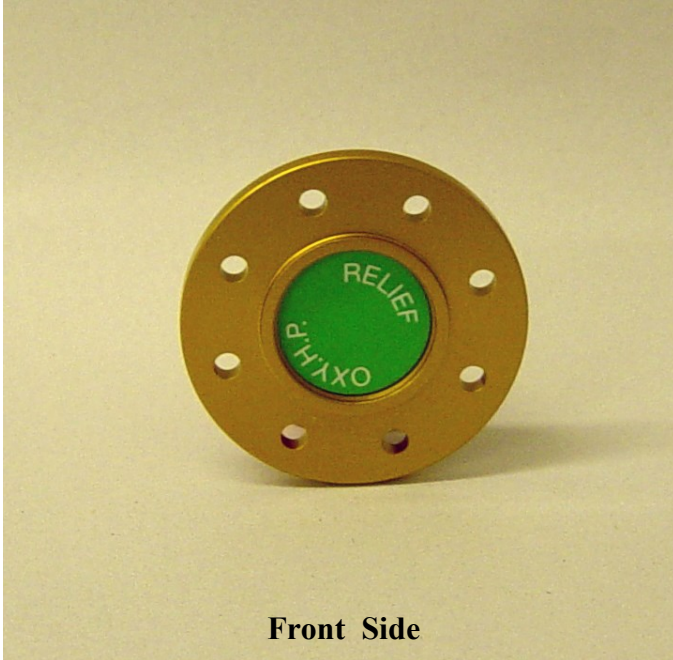

Front Side



Side View