




REMOTE PRESSURE LINE VALVE ASSY (WITH 1/8" HIGH PRESSURE COPPER LINE)

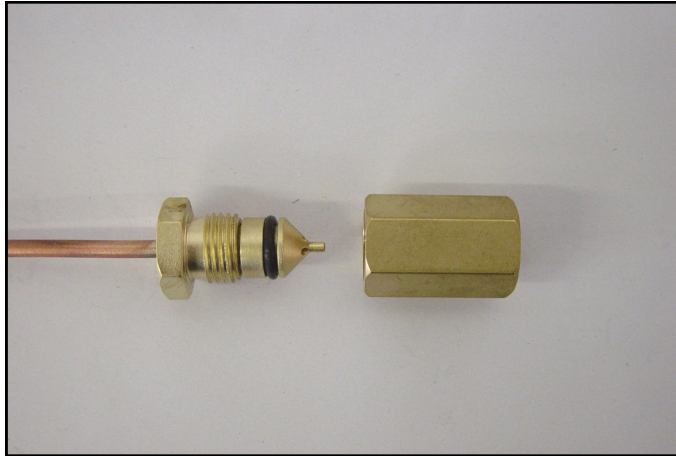

4110-470, Remote Pressure Line Assy

General Description

The aerox® Remote Pressure Line Valve Assembly provides a means of removing the pressurized cylinder valve assembly from an installation without emptying the cylinder contents.

Function

The 5/8" Brass Collar is installed onto the MS Filler on the Regulator. The Plunger is inserted into the Collar followed by the 5/8" Retainer. By threading in the Retainer, the plunger depresses the Schrader Valve inside the MS Filler Housing, allowing the flow of oxygen into the cylinder valve.

Specifications

Part Number: 4110-470

Dimensions:

Length: Reference Table


Weight: Reference Table

Material: Copper/Brass

Specification: AMS 2666 (Solder)

Pressure: 1850 PSI (Max)

Maintenance: Overhaul including O-Ring Replacement and pressure test each 5 years is recommended.

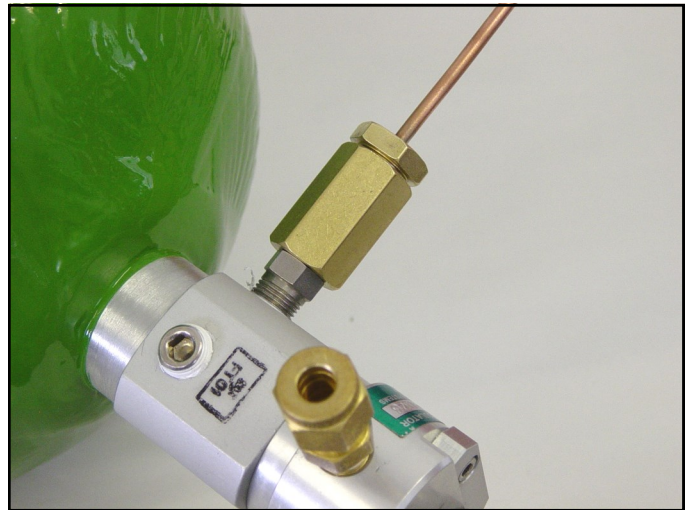

4110-470, Installed

Copper Line Length	Assembly Weight
3.125"	1.9 Oz
24"	2.7 Oz
72"	5.4 Oz
93"	7.7 Oz

* Valve Assemblies are PMA'd for installation in Cirrus SR-20 & SR-22 Aircraft.